


FLAT ROOF: THREE COURSE FABRIC REINFORCED

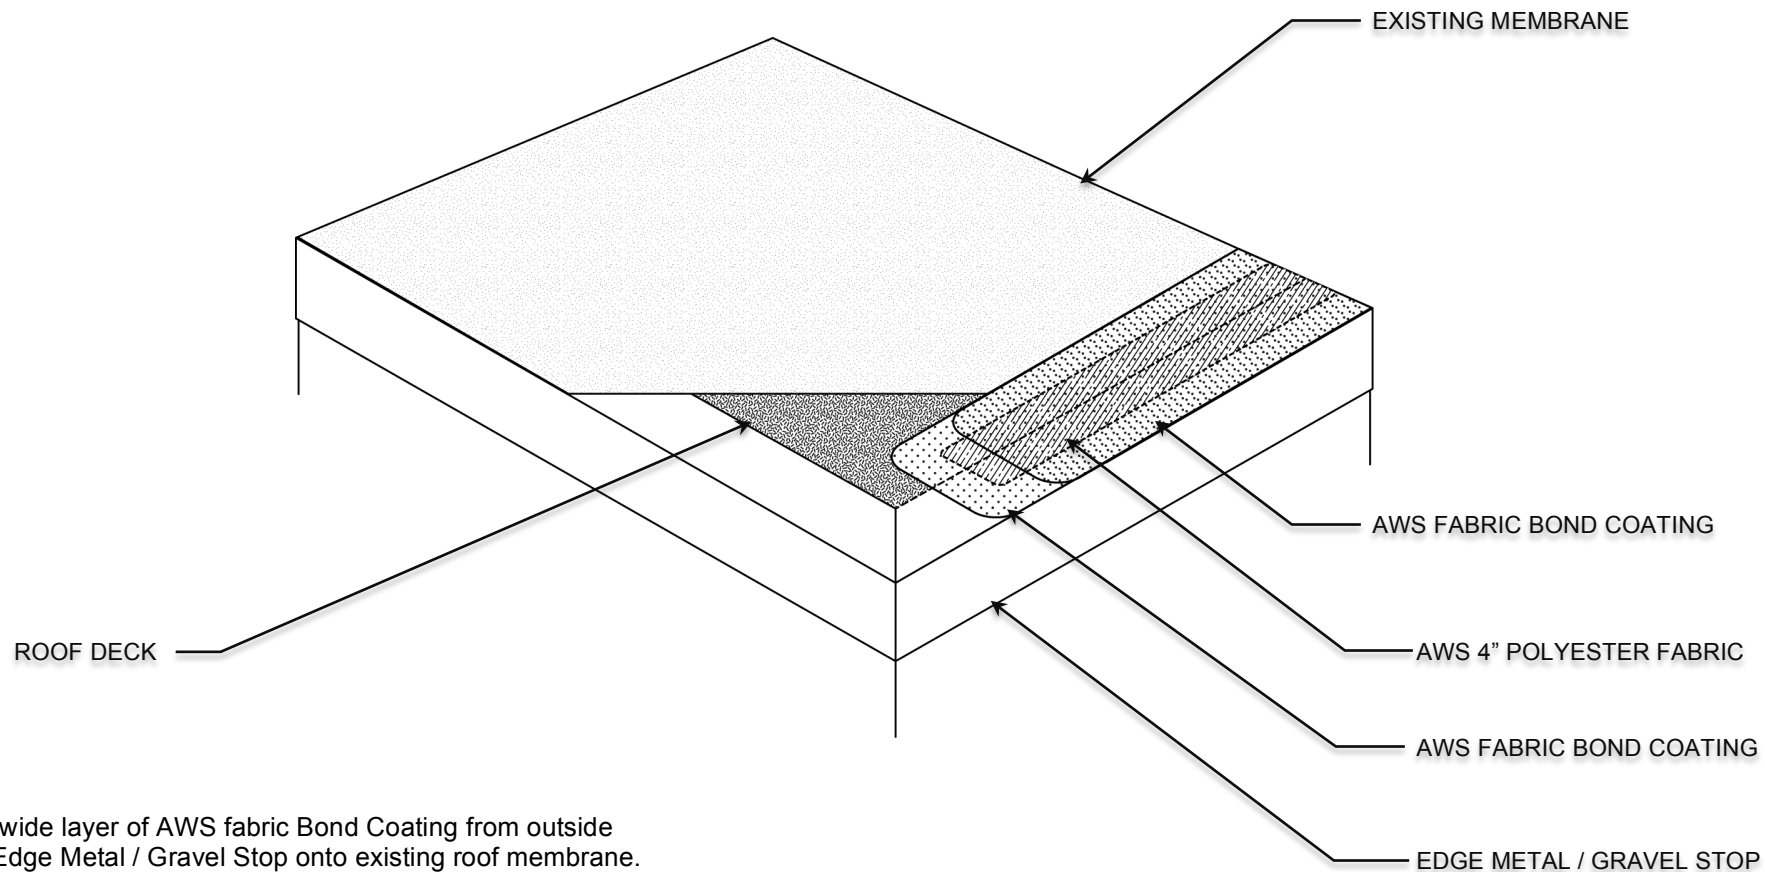

1. Apply 6" wide layer of AWS fabric Bond Coating from outside edge of Edge Metal / Gravel Stop onto existing roof membrane.
2. Embed 4" AWS Polyester Fabric into wet coating.
3. Apply a 6" wide layer of AWS Fabric Bond coating encapsulating 4" fabric.

NOTE: Contact American WeatherStar with any questions.



800.771.6643

AMERICANWEATHERSTAR.COM

EDGE METAL / GRAVEL STOP

See specific application guideline for suitable AWS fabric bond coating.

NOTE: This detail is provided to show a generally recommended procedure for dealing with the condition shown. It will not and cannot provide a specific solution for every condition likely to be encountered in field application. Where field conditions differ, the use of applicable portions of the detail shown or its adaptation by an experienced and conscientious applicator should result in a quality project.

LEGEND



FABRIC BOND COATING



POLYESTER FABRIC

REVISION DATE: 10/30/2015

SCALE: NTS