


FLAT ROOF: MASTIC

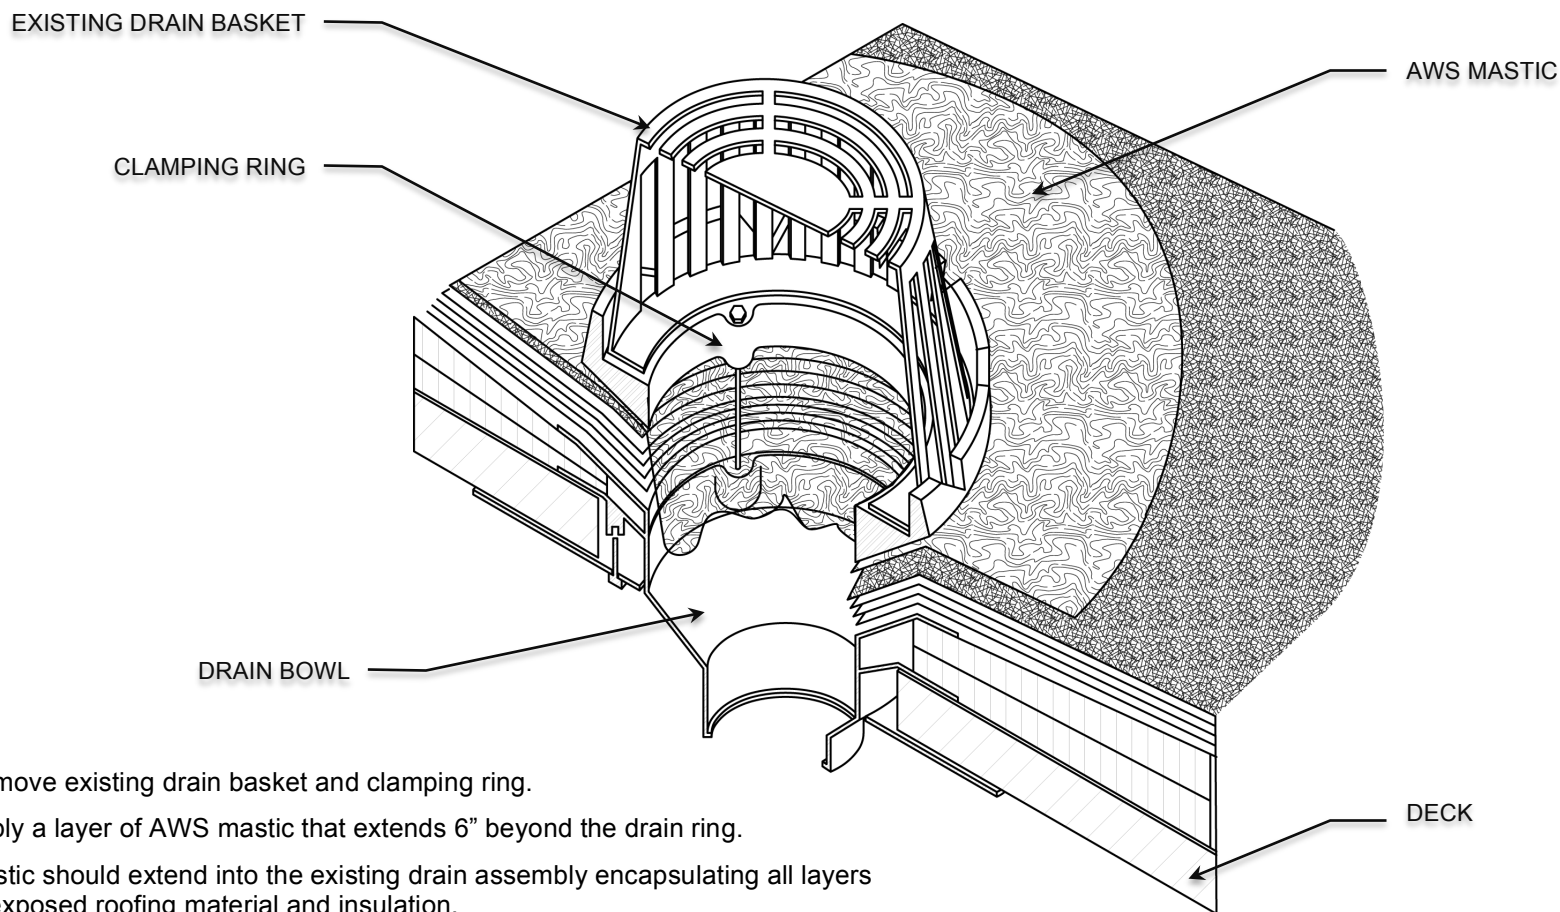

1. Remove existing drain basket and clamping ring.
2. Apply a layer of AWS mastic that extends 6" beyond the drain ring.
3. Mastic should extend into the existing drain assembly encapsulating all layers of exposed roofing material and insulation.
4. Apply at 90 wet mils to achieve a minimum of 60 dry mils feathered to prevent water damming.
5. Re-install clamping ring and drain basket.

NOTE: Contact American WeatherStar with any questions.

DRAIN DETAIL

See specific application guideline for suitable AWS mastic.

LEGEND



MASTIC

NOTE: This detail is provided to show a generally recommended procedure for dealing with the condition shown. It will not and cannot provide a specific solution for every condition likely to be encountered in field application. Where field conditions differ, the use of applicable portions of the detail shown or its adaptation by an experienced and conscientious applicator should result in a quality project.

REVISION DATE: 10/30/2015

SCALE: NTS



800.771.6643

AMERICANWEATHERSTAR.COM