


# FLAT ROOF: MASTIC

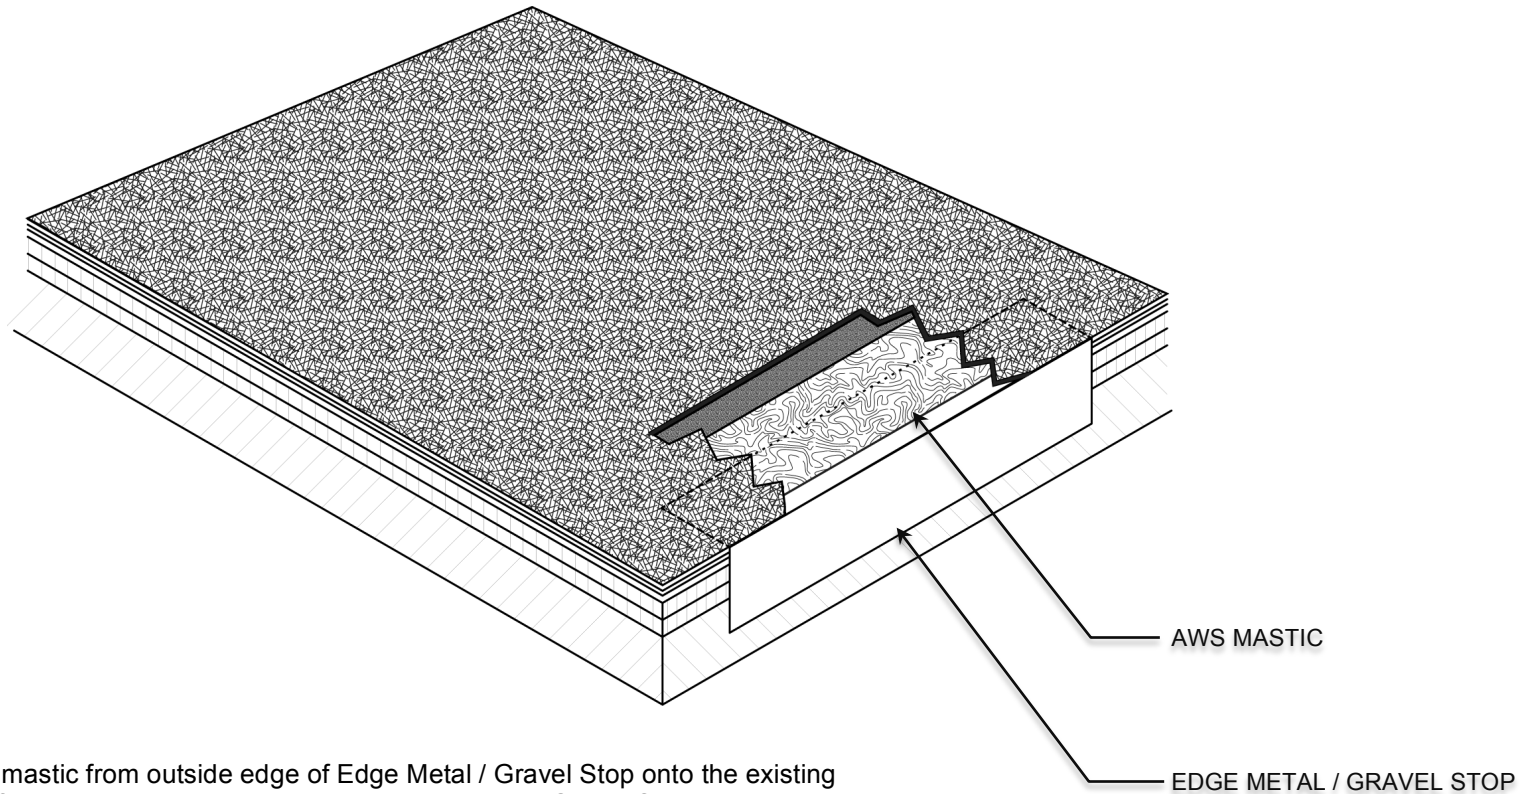

1. Apply a 4" wide layer of AWS mastic from outside edge of Edge Metal / Gravel Stop onto the existing roof membrane (If current roofing membrane is not attached to Edge Metal / Gravel Stop, it will be necessary to cut the membrane back to a point where it is attached to the Edge Metal / Gravel Stop).
2. Apply at a rate of 90 wet mils insuring a smooth transition from membrane to Gravel Stop/Edge Metal.
3. Feather the edges to prevent water damming.

NOTE: Contact American WeatherStar with any questions.

## EDGE METAL / GRAVEL STOP

See specific application guideline for suitable AWS mastic.

NOTE: This detail is provided to show a generally recommended procedure for dealing with the condition shown. It will not and cannot provide a specific solution for every condition likely to be encountered in field application. Where field conditions differ, the use of applicable portions of the detail shown or its adaptation by an experienced and conscientious applicator should result in a quality project.

### LEGEND



MASTIC

REVISION DATE: 10/30/2015

SCALE: NTS



800.771.6643

AMERICANWEATHERSTAR.COM