


FLAT ROOF: MASTIC

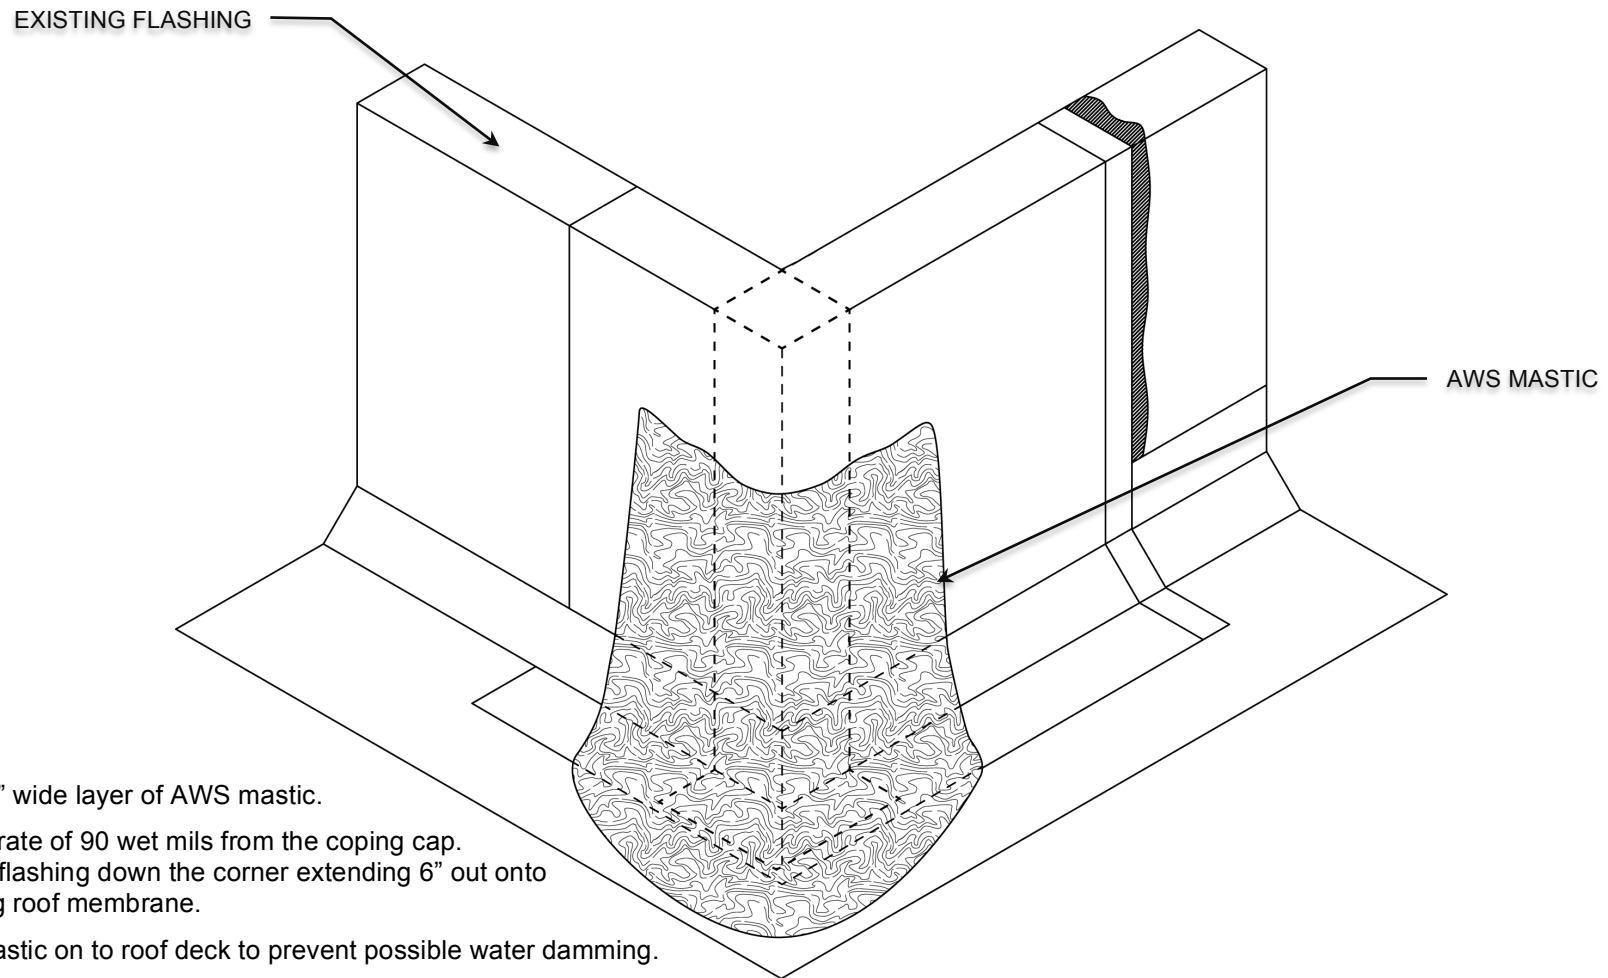

1. Apply an 6" wide layer of AWS mastic.
2. Apply at a rate of 90 wet mils from the coping cap or counter flashing down the corner extending 6" out onto the existing roof membrane.
3. Feather mastic on to roof deck to prevent possible water damming.

NOTE: Contact American WeatherStar with any questions.



800.771.6643

AMERICANWEATHERSTAR.COM

OUTSIDE CORNER RESTORATION DETAIL

See specific application guideline for suitable AWS mastic.

NOTE: This detail is provided to show a generally recommended procedure for dealing with the condition shown. It will not and cannot provide a specific solution for every condition likely to be encountered in field application. Where field conditions differ, the use of applicable portions of the detail shown or its adaptation by an experienced and conscientious applicator should result in a quality project.

LEGEND



MASTIC

REVISION DATE: 10/30/2015

SCALE: NTS