


METAL ROOF: MASTIC

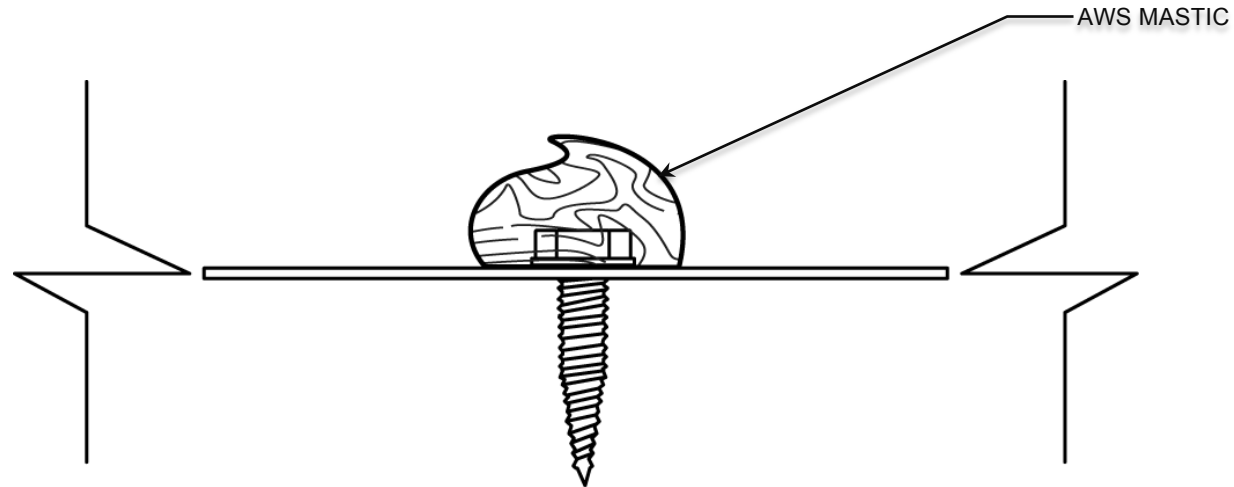

1. Tighten all fasteners.
2. Replace missing fasteners with next size larger fastener.
3. Apply a dollop of AWS mastic that completely encapsulates screw head and washer.

NOTE: Contact American WeatherStar with any questions.



800.771.6643

AMERICANWEATHERSTAR.COM

EXPOSED FASTENERS

See specific application guideline for suitable AWS mastic.

NOTE: This detail is provided to show a generally recommended procedure for dealing with the condition shown. It will not and cannot provide a specific solution for every condition likely to be encountered in field application. Where field conditions differ, the use of applicable portions of the detail shown or its adaptation by an experienced and conscientious applicator should result in a quality project.

LEGEND



MASTIC

REVISION DATE: 12/28/2015

SCALE: NTS