


METAL ROOF: MASTIC

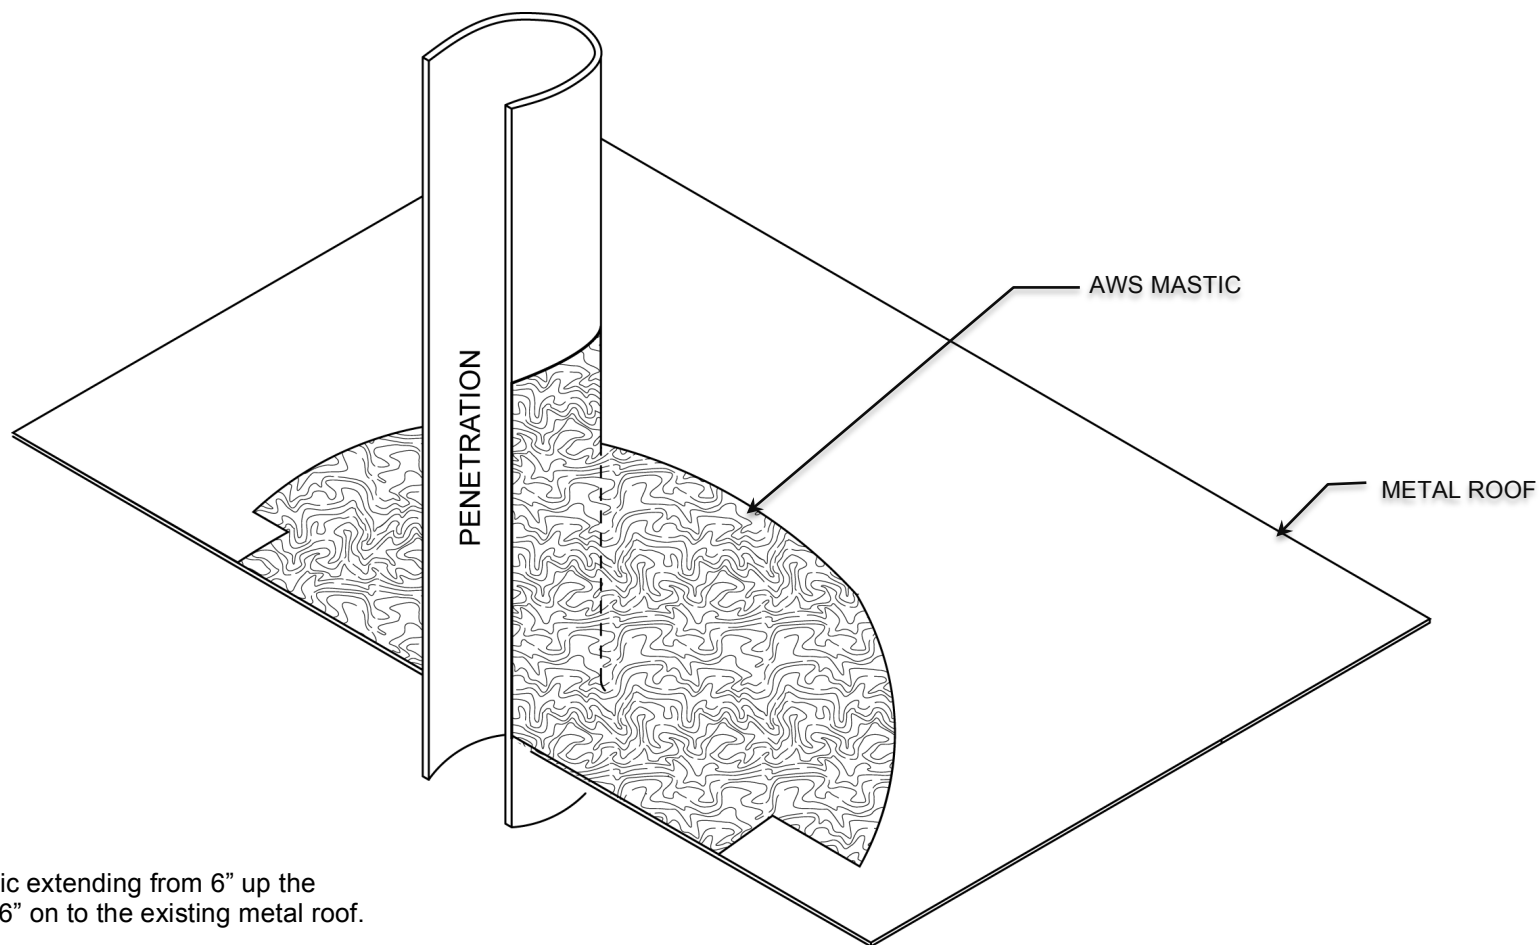

1. Apply a layer of AWS mastic extending from 6" up the penetration and extending 6" on to the existing metal roof.
2. Apply AWS mastic at a rate of approximately 90 wet mils, ensuring all voids are sealed.
3. Feather AWS mastic on to existing metal roof to prevent possible water damming.

NOTE: Contact American WeatherStar with any questions.



800.771.6643

AMERICANWEATHERSTAR.COM

PENETRATION RESTORATION DETAIL

See specific application guideline for suitable AWS mastic.

NOTE: This detail is provided to show a generally recommended procedure for dealing with the condition shown. It will not and cannot provide a specific solution for every condition likely to be encountered in field application. Where field conditions differ, the use of applicable portions of the detail shown or its adaptation by an experienced and conscientious applicator should result in a quality project.

LEGEND



MASTIC

REVISION DATE: 12/28/2015

SCALE: NTS