


FLAT ROOF: MASTIC

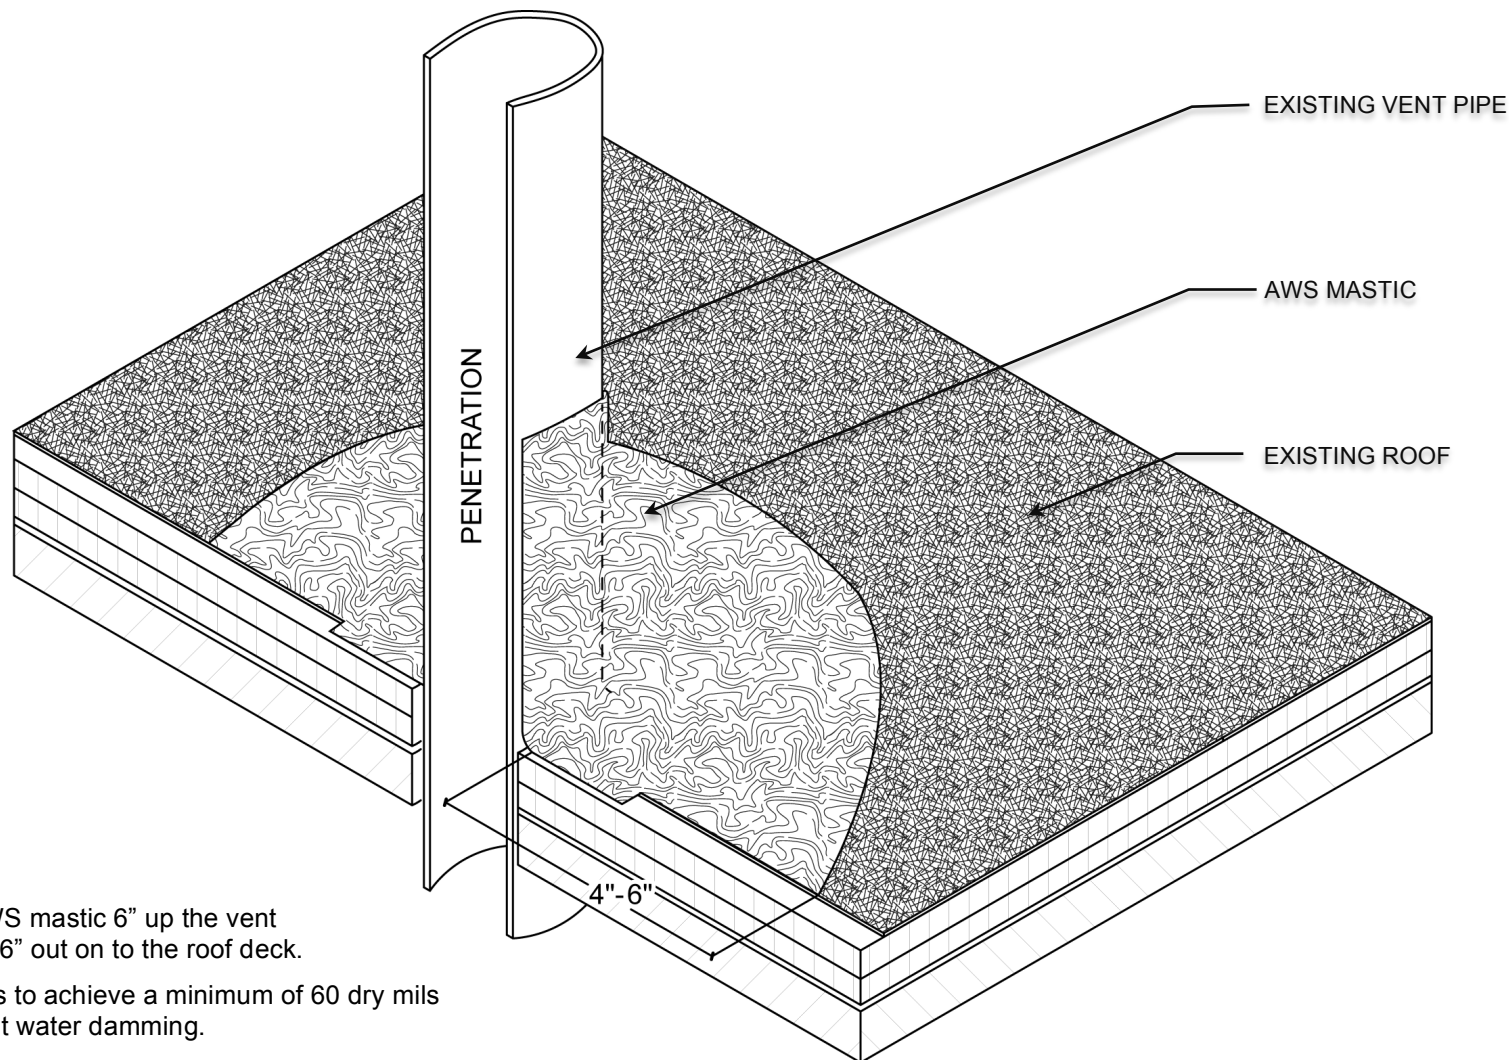

1. Apply a layer of AWS mastic 6" up the vent pipe and feathered 6" out on to the roof deck.
2. Apply at 90 wet mils to achieve a minimum of 60 dry mils feathered to prevent water damming.

NOTE: Contact American WeatherStar with any questions.

VENT PIPE RESTORATION DETAIL

See specific application guideline for suitable AWS mastic.

NOTE: This detail is provided to show a generally recommended procedure for dealing with the condition shown. It will not and cannot provide a specific solution for every condition likely to be encountered in field application. Where field conditions differ, the use of applicable portions of the detail shown or its adaptation by an experienced and conscientious applicator should result in a quality project.

LEGEND



MASTIC

REVISION DATE: 10/20/2015

SCALE: NTS



800.771.6643

AMERICANWEATHERSTAR.COM