



FLAT ROOF: THREE COURSE FABRIC REINFORCED

Finger Flashed Fabric Cut Detail For Wrap Around Penetration Base

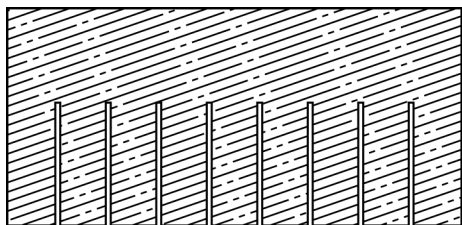

Cut / Slice the Fabric into "Fingers" About Half as Deep as the Fabric Width and Wrap Around the Entire Base of the Pipe / Penetration.

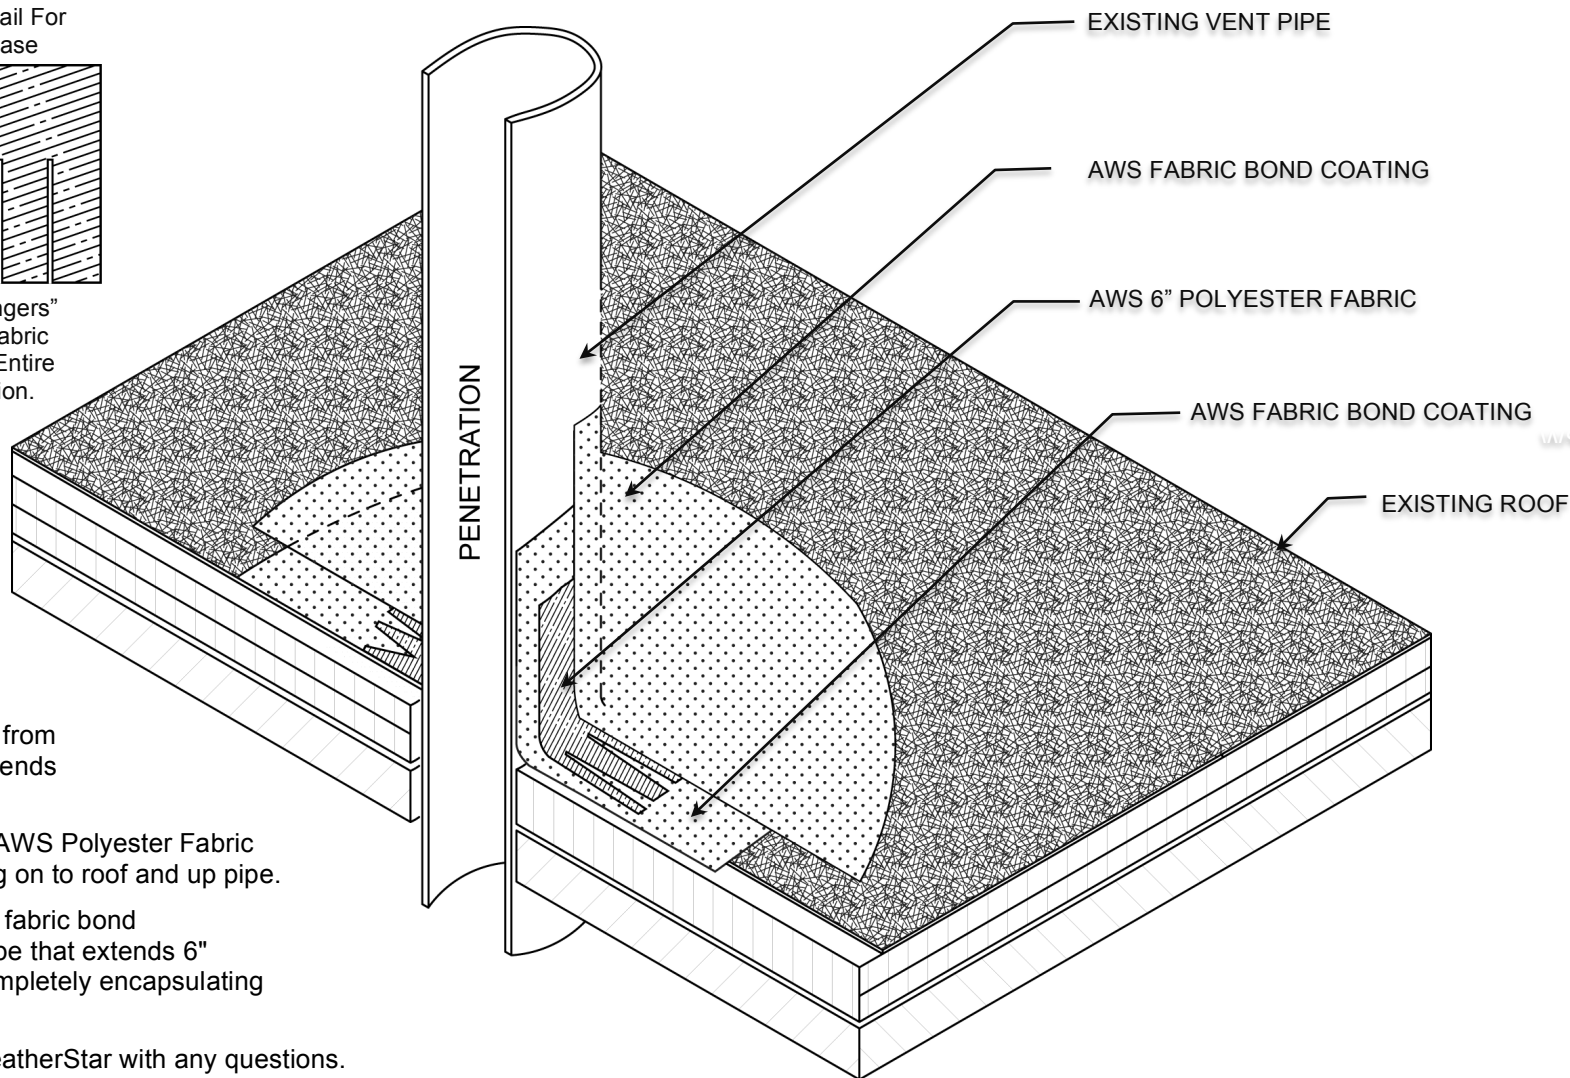

1. Apply a layer of AWS fabric bond coat extending from 6" up the vent pipe that extends 6" on to existing roof deck.
2. Embed "finger flashed" 6" AWS Polyester Fabric into wet fabric bond coating on to roof and up pipe.
3. Apply a wide layer of AWS fabric bond coat from 6" up the vent pipe that extends 6" on to existing roof deck completely encapsulating AWS Polyester Fabric.

NOTE: Contact American WeatherStar with any questions.

VENT PIPE RESTORATION DETAIL

See specific application guideline for suitable AWS fabric bond coating.

NOTE: This detail is provided to show a generally recommended procedure for dealing with the condition shown. It will not and cannot provide a specific solution for every condition likely to be encountered in field application. Where field conditions differ, the use of applicable portions of the detail shown or its adaptation by an experienced and conscientious applicator should result in a quality project.

LEGEND



FABRIC BOND COATING



POLYESTER FABRIC

REVISION DATE: 10/20/2015

SCALE: NTS



800.771.6643

AMERICANWEATHERSTAR.COM