


METAL ROOF: MASTIC

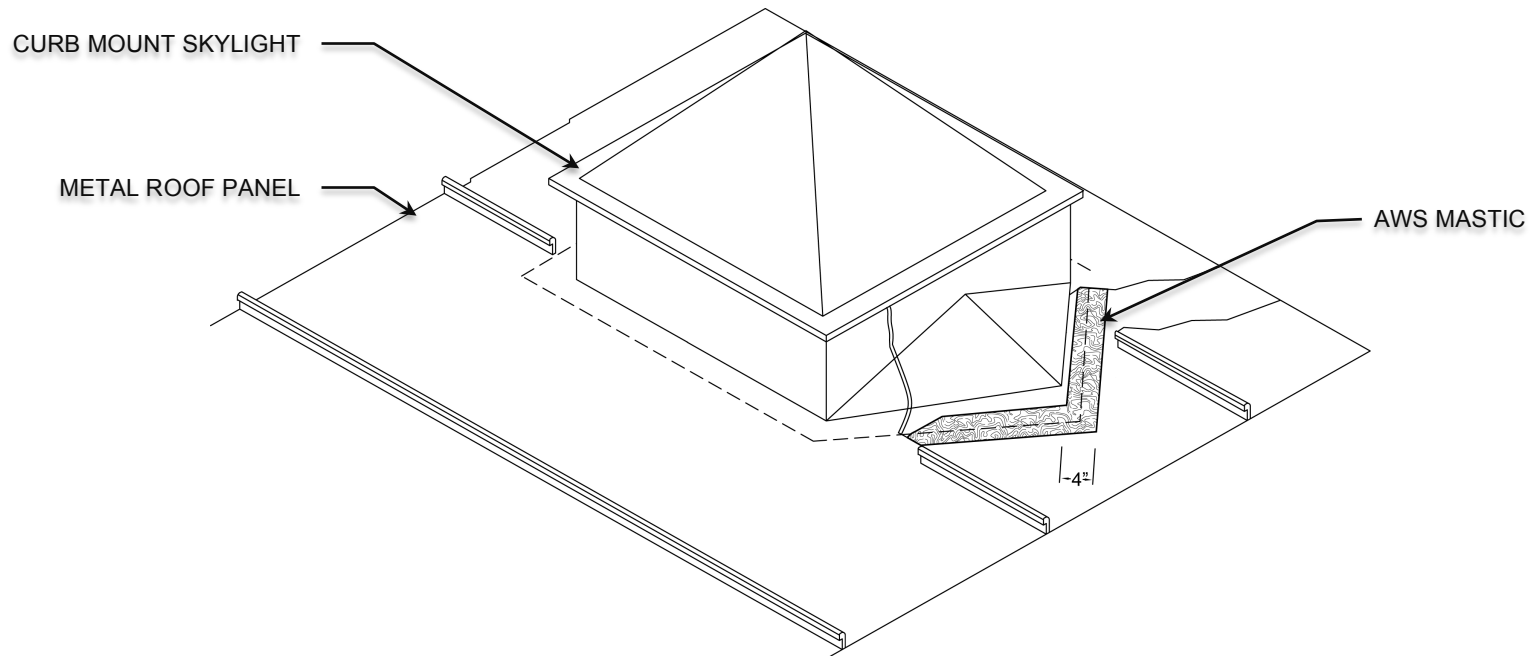

1. Use stitch screws to close any excessive gaps.
2. Apply a 6" wide layer of AWS mastic centered on the horizontal and vertical sides of the skylight curb and the existing metal roof panel.
3. Apply AWS mastic at a rate of approximately 90 wet mills, ensuring all voids are sealed.
4. Feather AWS mastic on to existing metal roof to prevent possible water damming.

SPECIAL NOTE: Never coat over skylight with any coating other than those that are clear or opaque.

NOTE: Contact American WeatherStar with any questions.



800.771.6643

AMERICANWEATHERSTAR.COM

SKYLIGHT – CURB MOUNT

See specific application guideline for suitable AWS mastic.

NOTE: This detail is provided to show a generally recommended procedure for dealing with the condition shown. It will not and cannot provide a specific solution for every condition likely to be encountered in field application. Where field conditions differ, the use of applicable portions of the detail shown or its adaptation by an experienced and conscientious applicator should result in a quality project.

LEGEND



MASTIC

REVISION DATE: 12/28/2015

SCALE: NTS